

EO Series Hybrid Inverter

(GW3K-EO-G20 | GW3.6K-EO-G20 | GW5K-EO-G20 | GW6K-EO-G20)

Quick Installation Guide

Copyright © GoodWe Technologies Co., Ltd. 2026. All rights reserved.



Official Website




340-01375-01

GoodWe Technologies Co., Ltd.
No. 90 Zijin Rd., New District, Suzhou, 215011, China
www.goodwe.com
service@goodwe.com



- The information in this quick installation guide is subject to change due to product updates or other reasons. This guide cannot replace the product labels or the safety precautions in the user manual unless otherwise specified. All descriptions here are for guidance only.
- All operations should be performed by trained and knowledgeable technicians who are familiar with local standards and safety regulations.
- Strictly follow the installation, operation, and configuration instructions in this guide and user manual. The manufacturer shall not be liable for equipment damage or personal injury if you do not follow the instructions.

Procedure


1 Installation

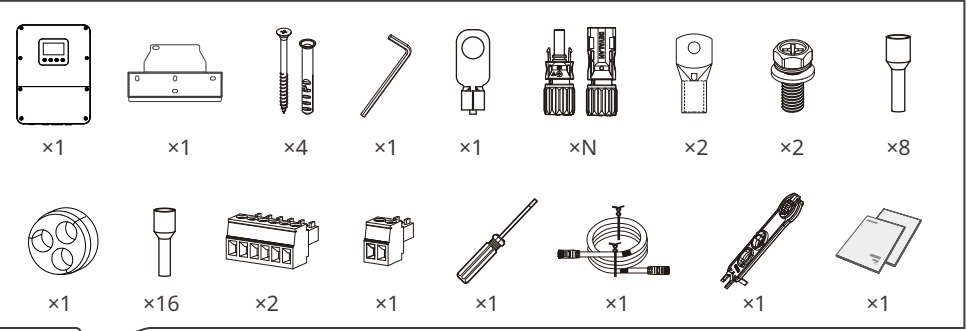


N = Quantity depends on the inverter model.

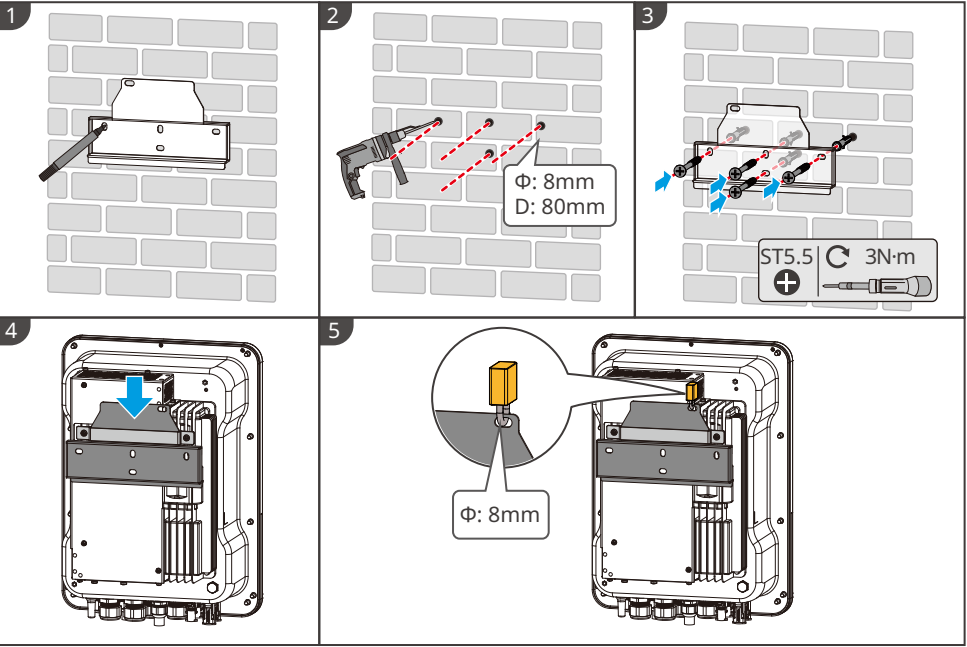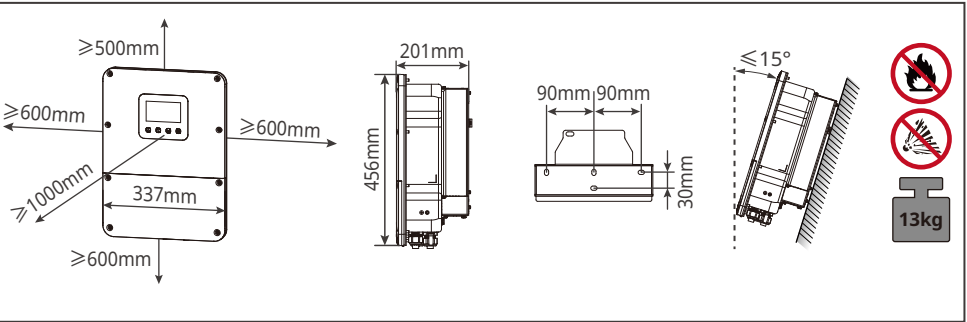

Removing the Cover

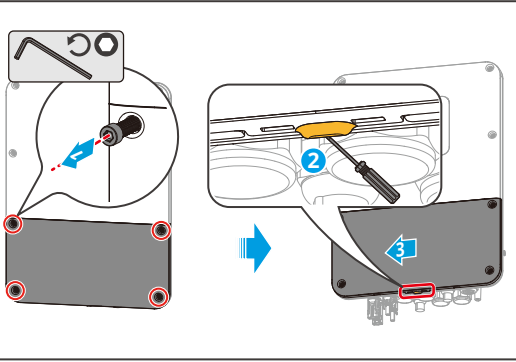


Use of tool (option)

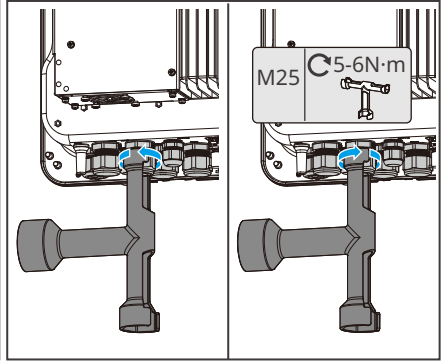


2 Electrical Connection


PE (⊕)

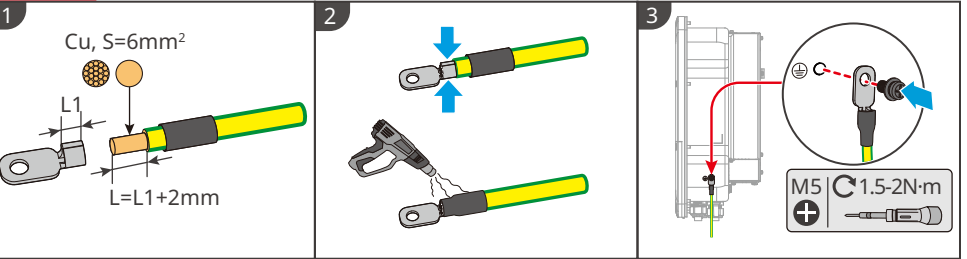

DC (MPPT)

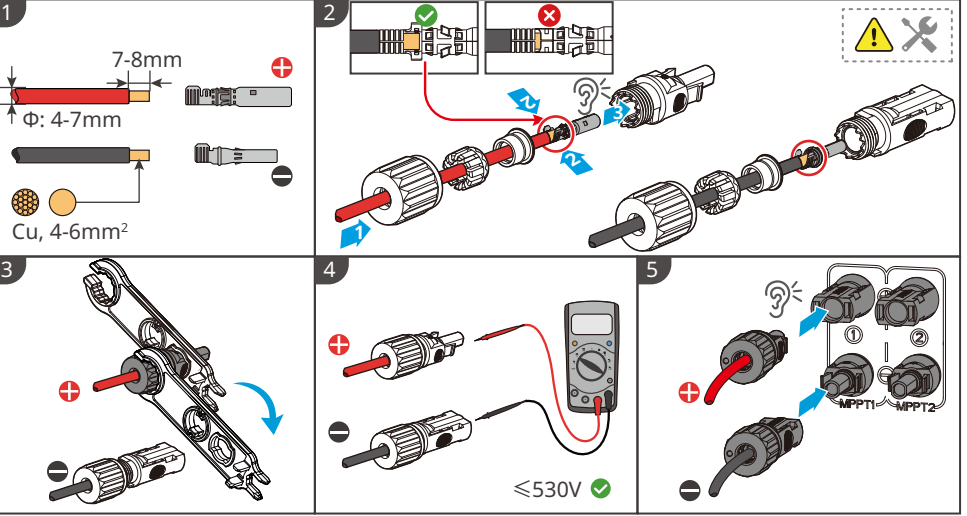


AC (GRID&SMART&BACK-UP)


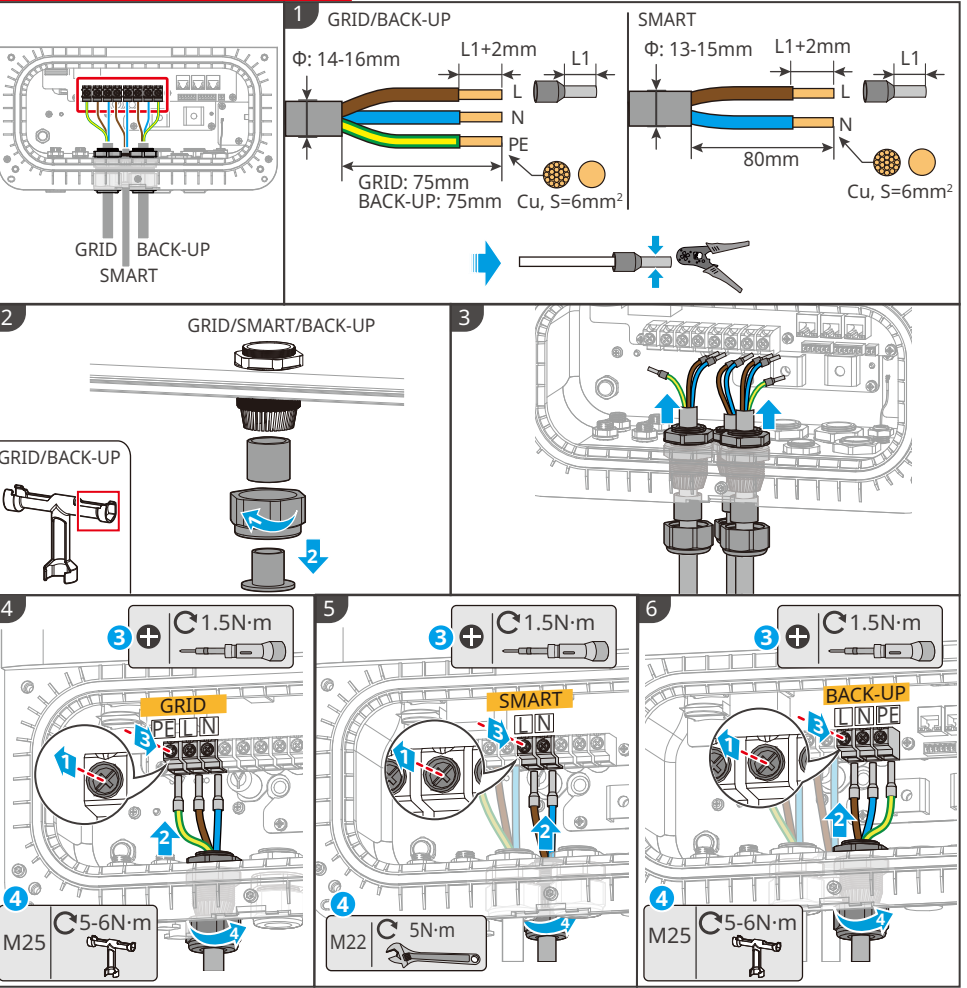


Procedure


DC(BAT)

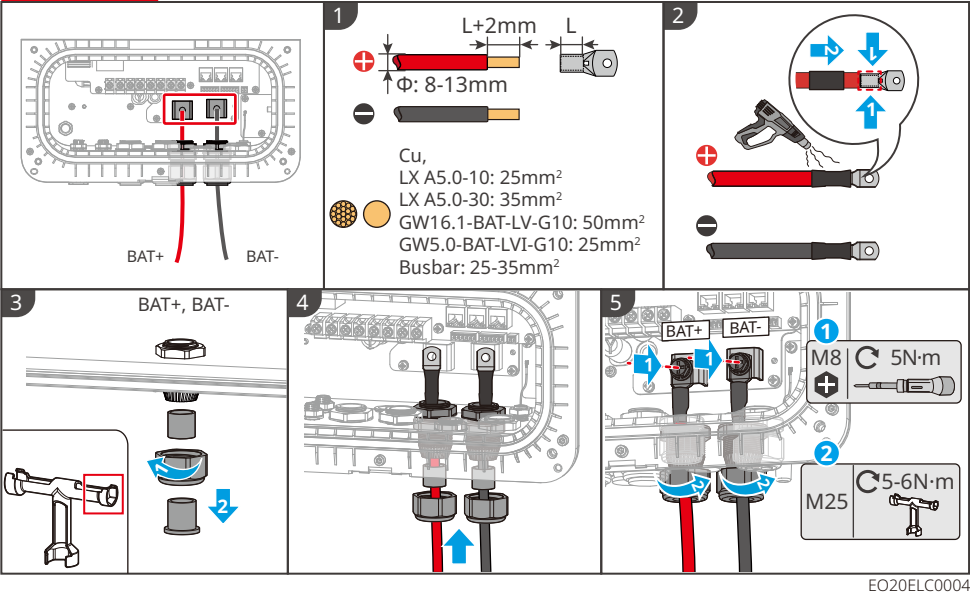


COM

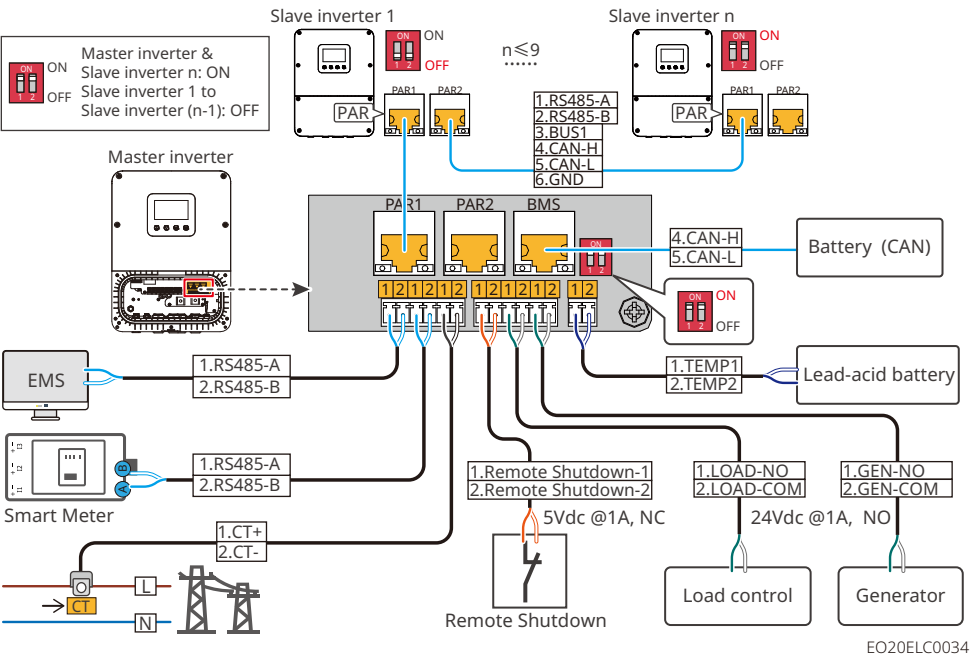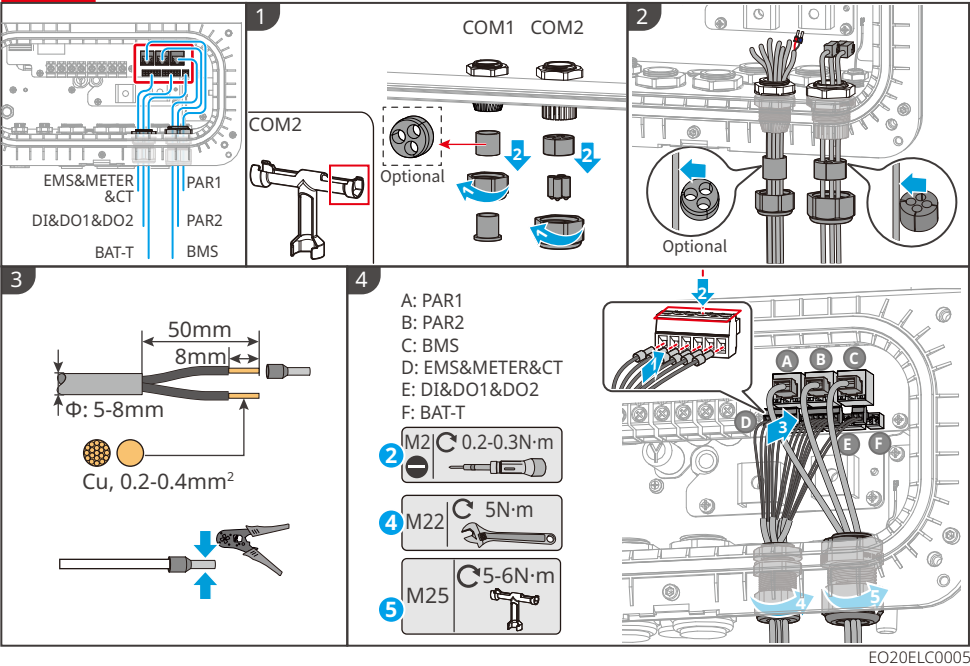


Installing the Cover

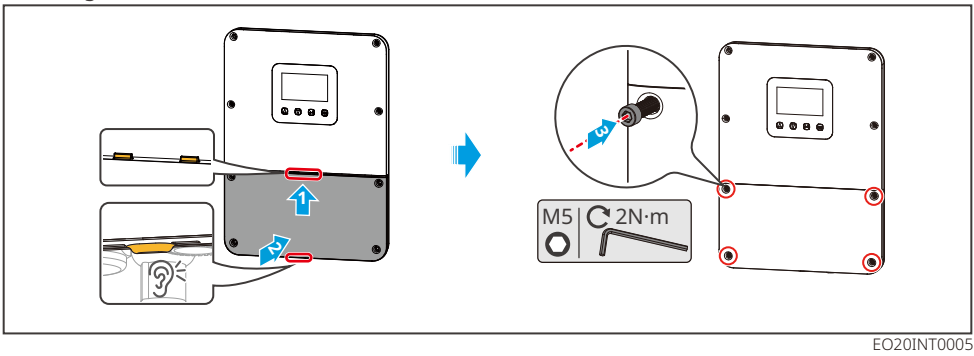

Commissioning and Monitoring

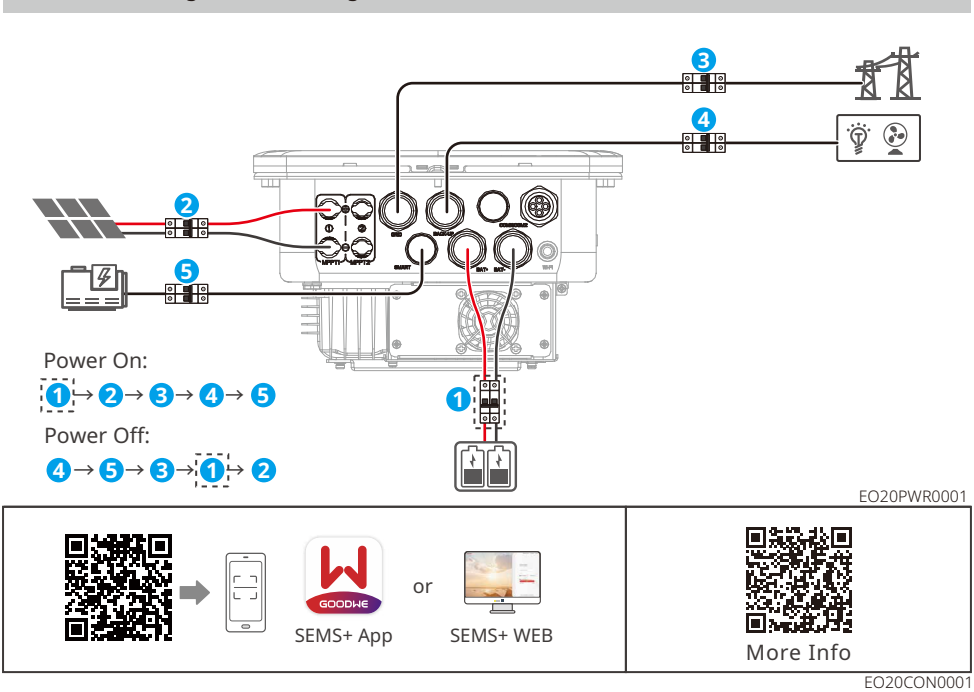

EO20PWR0001

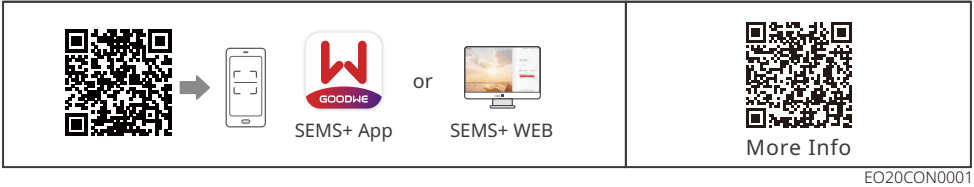

More Info