

ET Series Hybrid Inverter
(GW25K-ET-10 | GW30K-ET-10 | GW40K-ET-10 | GW50K-ET-10)

Quick Installation Guide
快速安装指导

Copyright © GoodWe Technologies Co., Ltd. 2026. All rights reserved.
版权所有©固德威技术股份有限公司 2026。保留所有权利。

EN-English

- The information in this quick installation guide is subject to change due to product updates or other reasons. This guide cannot replace the product labels or the safety precautions in the user manual unless otherwise specified. All descriptions here are for guidance only.
- All operations should be performed by trained and knowledgeable technicians who are familiar with local standards and safety regulations.
- Strictly follow the installation, operation, and configuration instructions in this guide and user manual. The manufacturer shall not be liable for equipment damage or personal injury if you do not follow the instructions.

ZH-中文

- 因产品版本升级或其他原因，本文档内容会不定期进行更新。如无特殊约定，本文档不可取代产品标签或用户手册。本文档中的所有描述仅作为使用指导。
- 设备所有操作必须由专业、合格的电气技术人员进行，技术人员需熟知项目所在地相关标准及安全规范。
- 未按照本文档或对应用户手册要求安装、使用、配置设备造成的设备损坏或人员伤害，不在设备厂商责任范围之内。



Official Website



官方网站



More Info



更多信息





340-01372-05

GoodWe Technologies Co., Ltd.
No. 90 Zijin Rd., New District,
Suzhou, 215011, China
www.goodwe.com
service@goodwe.com


固德威技术股份有限公司
中国 苏州 高新区紫金路90号
T: 400-998-1212
www.goodwe.com
service@goodwe.com

Procedure


1 EN Installation ZH 安装

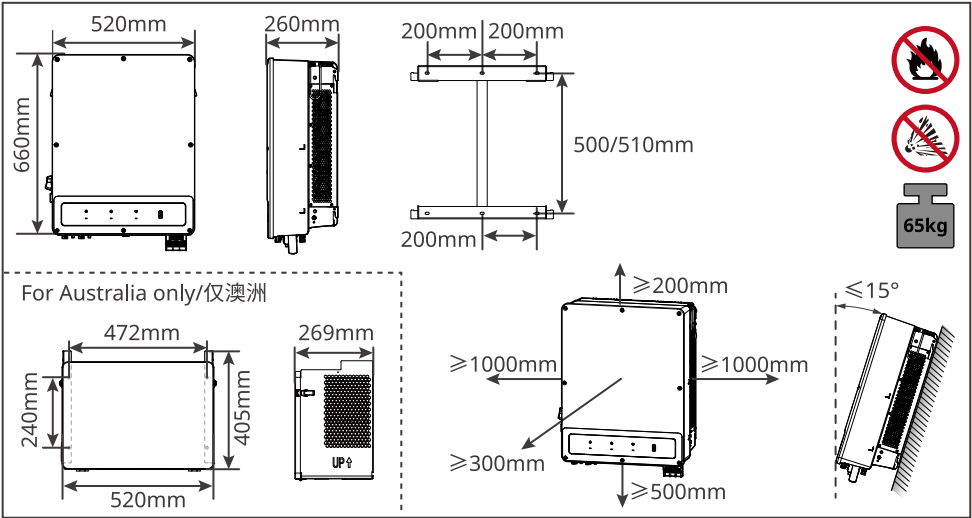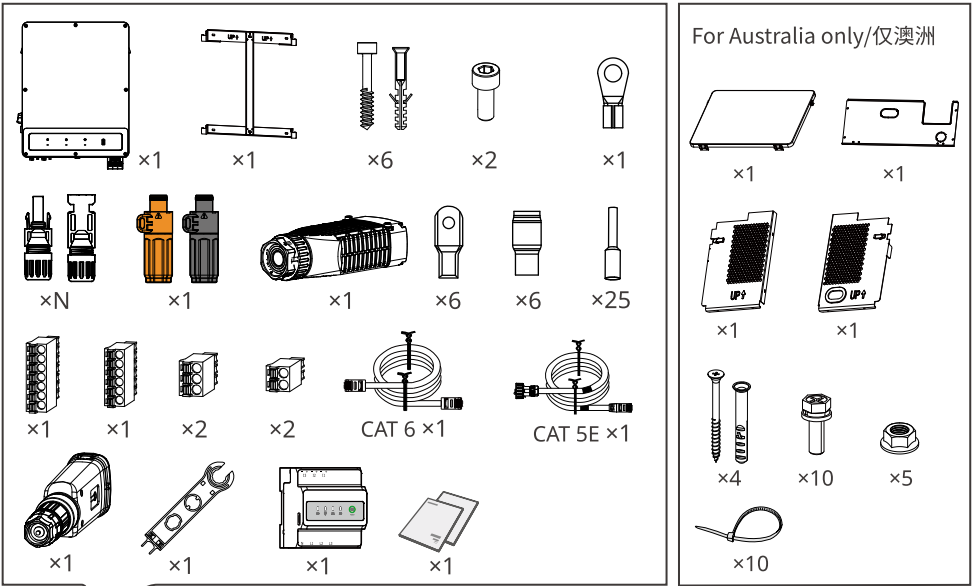


Wall-Mounting/挂墙安装

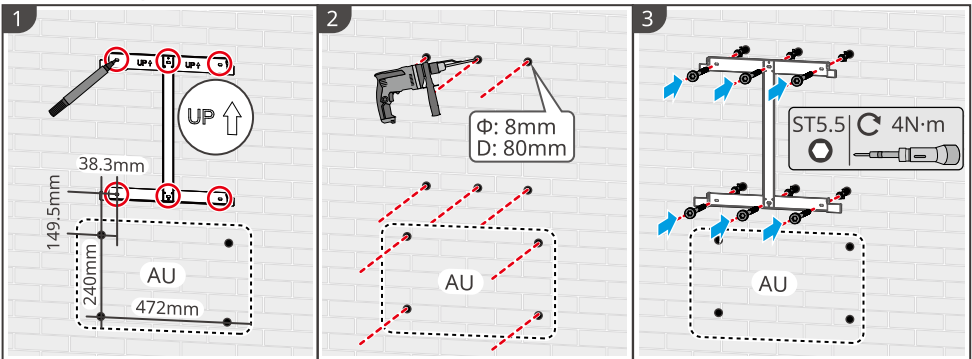


Cabinet Installation/机柜安装

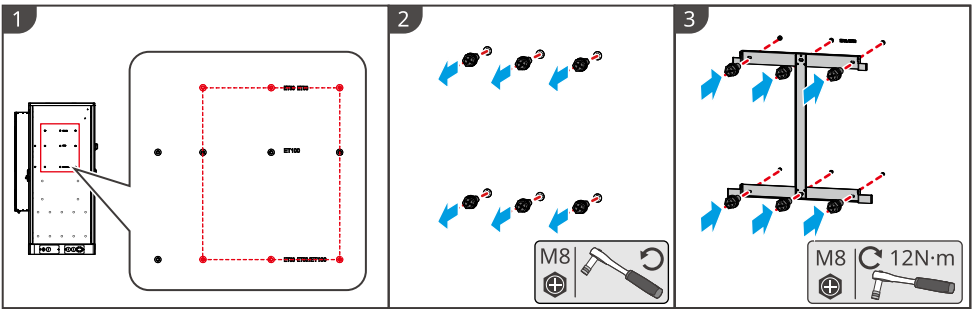

Installing the Inverter/安装逆变器

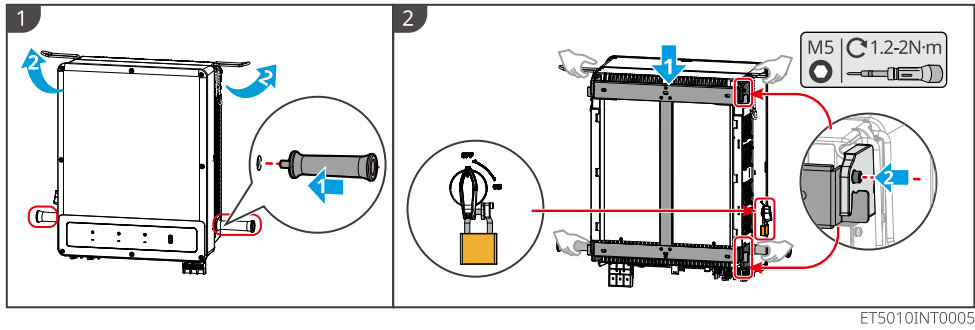


For Australia only/仅澳洲

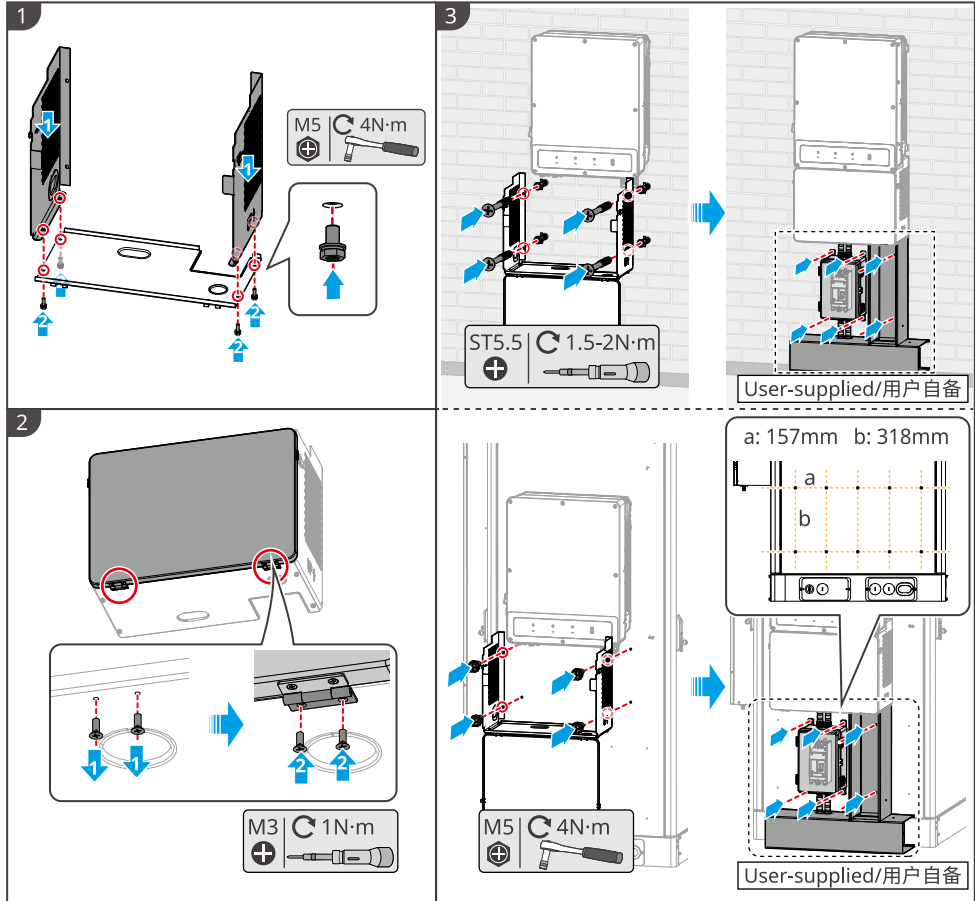


2 EN Electrical Connection ZH 电气连接

For Australia only/仅澳洲

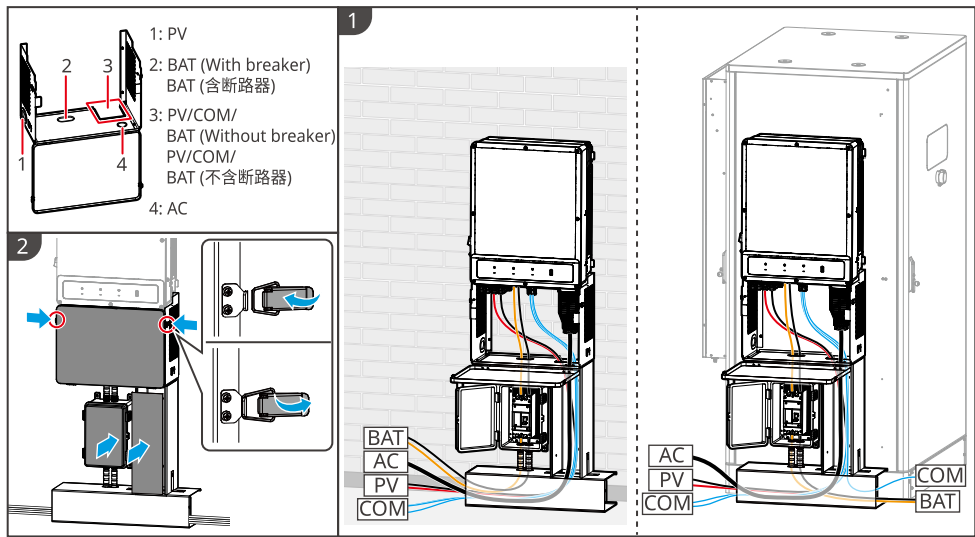


Procedure

PE (⊕)

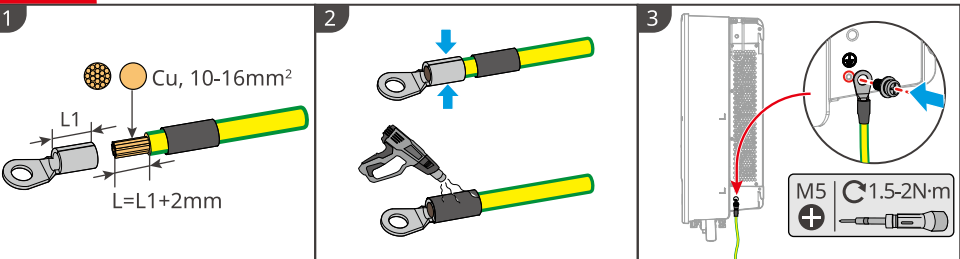


ET5010ELC0001

DC (MPPT)

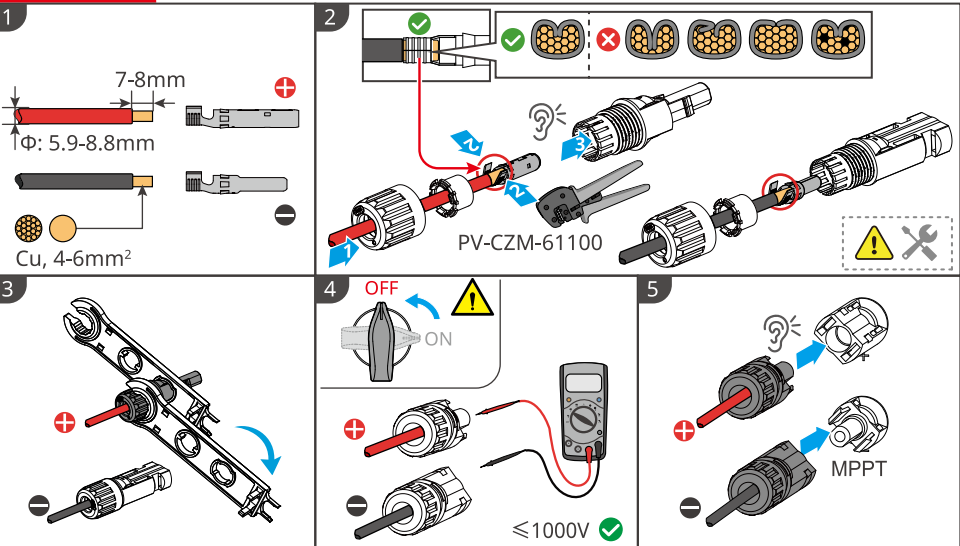


ET5010ELC0002

DC (BAT)

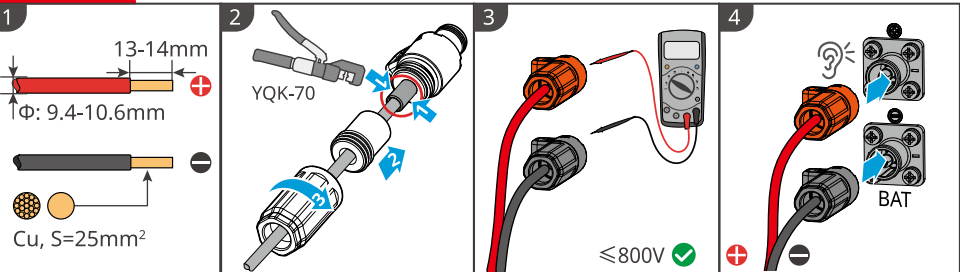

ET5010ELC0005


AC (AC)

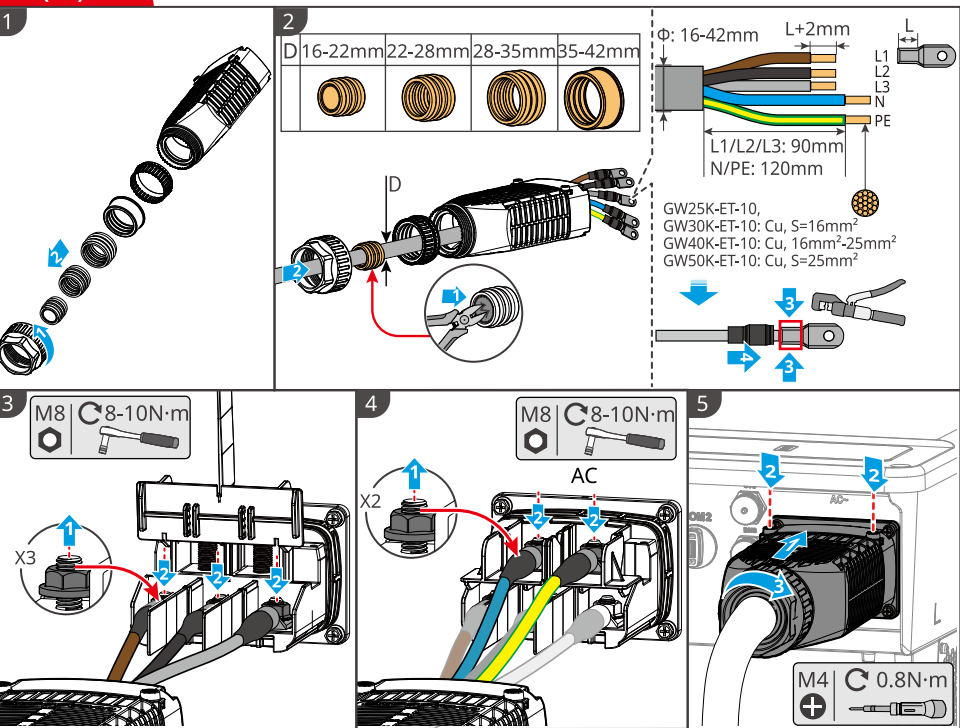



ET5010ELC0020

Communication Descriptions /通信功能说明


Single Inverter 单机	SW1: ON
-----------------------	---------

 

	Inverter 1 逆变器1	Inverter 2 逆变器2	Inverter n-1 逆变器n-1	Inverter n 逆变器n
STS-Backup Port Parallel Connect STS-Backup 端口合并连接	SW1: ON	SW1: OFF	SW1: OFF	SW1: ON
Inverters Paralleling with SEC3000C SEC3000C并机	SW1: ON	SW1: ON	SW1: ON	SW1: ON
STS-Backup Port Stand-alone Connect STS-Backup 端口独立连接	SW1: ON	SW1: ON	SW1: ON	SW1: ON

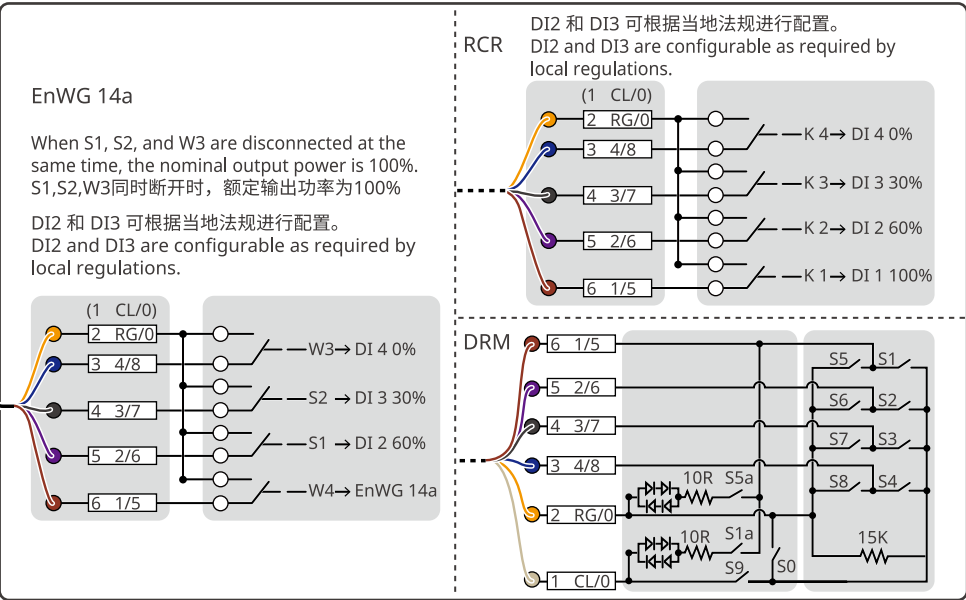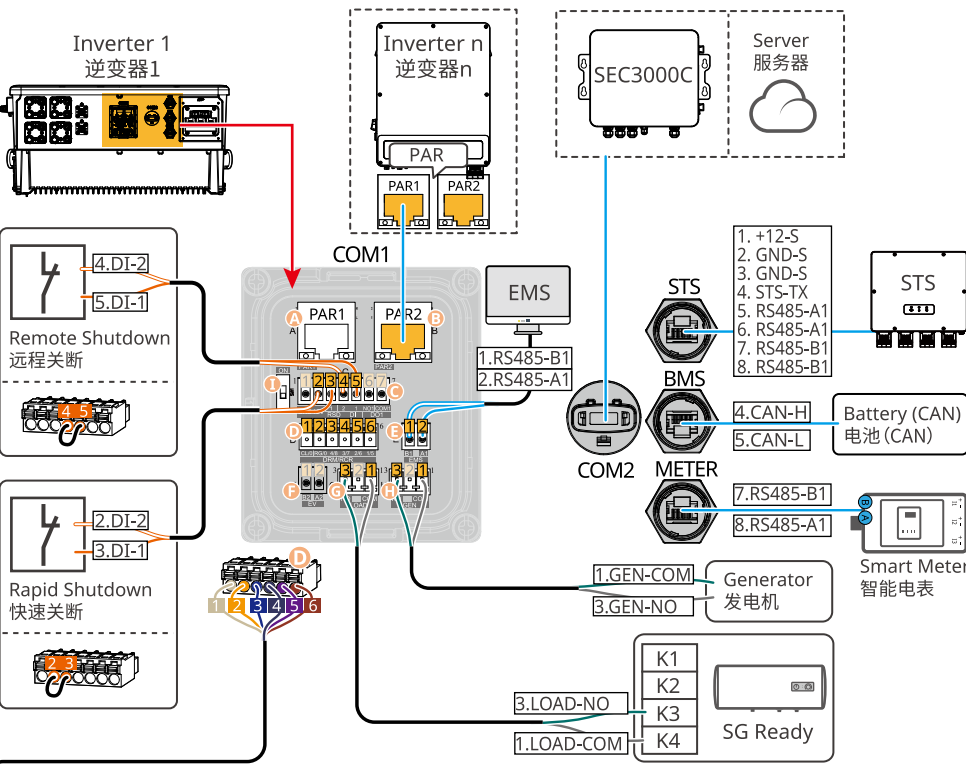


COM (COM1, COM2, STS, BMS, METER)

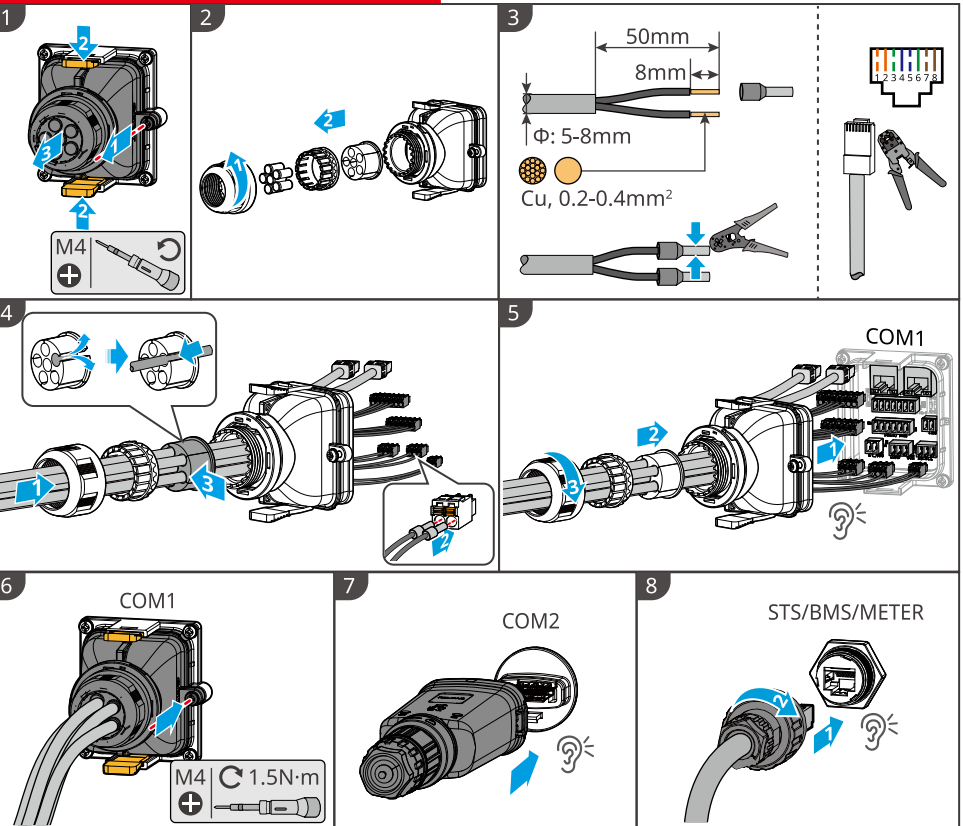

ET5010ELC0014

3 EN Commissioning and Monitoring

ZH 调测

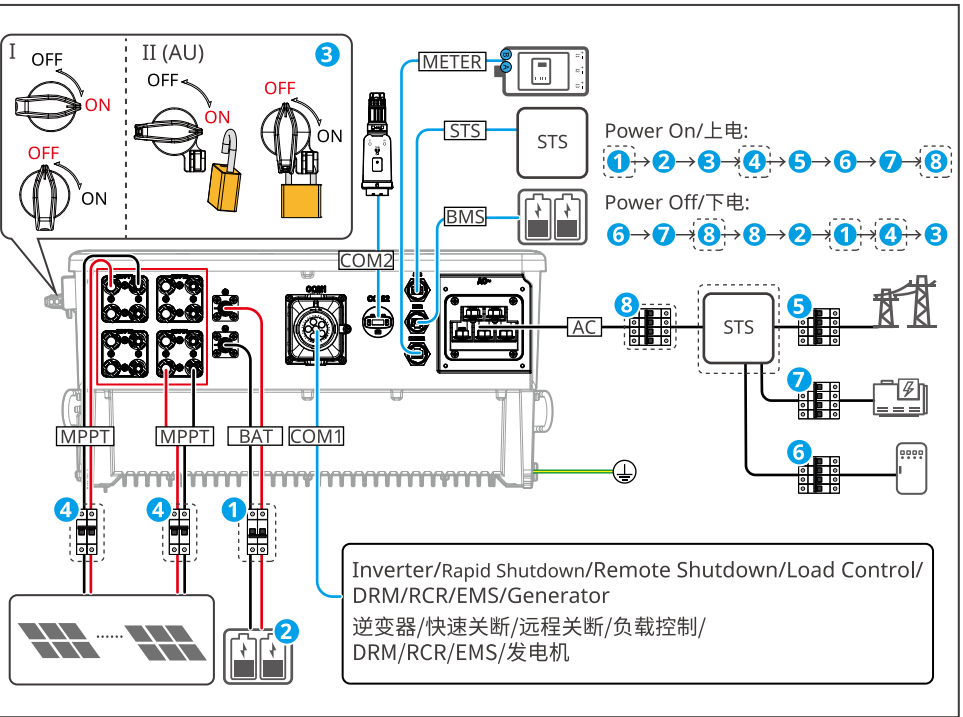

ET5010PWR0017



ET5010ELC0017